




After Cotton Electric has flagged the path of where the underground wire will go, please follow these instructions:

Step 1: Locate private lines

Find out if there are any underground lines that OKIE811 did **not** flag. OKIE811 generally does not mark private utility lines or secondary lines like those running from a meter to a building.

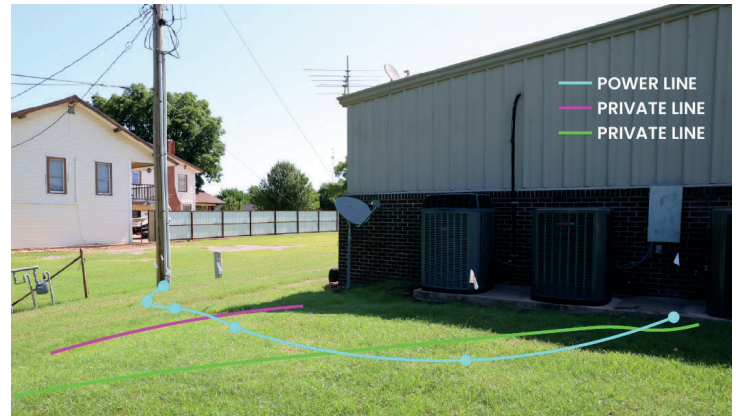

Step 2: Mark private lines

Private lines will need to be marked **5 feet on both sides** from the flagged underground power line. Mark the ground using paint that is easily visible.



Step 3: Wait for a call

Cotton Electric or one of our contractors will contact you by the provided phone number **2 days** in advance from digging and installing underground power lines.



For questions, call 580-875-3351